


CONKER.



User Guide SX5L

Side and interface buttons

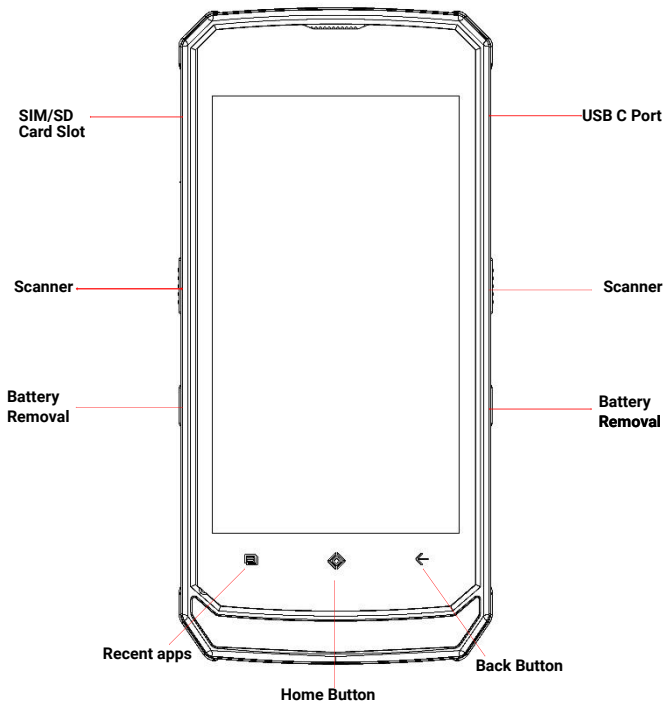

Key Buttons Instructions

1. Power Button:

- Long press the Power button to turn on the device. When turned on, it will take some time to finish initial settings like language, time zone, and Wi-Fi setup.
- In any interface, press the power button for one second to lock/unlock the interface.
- Long press the power button to access a menu for power off, restart, screenshot, or emergency.

2. Volume Button:

- Press the volume button to adjust the volume when playing music, radio, or video. The volume button can adjust the volume in a circular manner.
- Press the volume button to access the volume bar settings for media, calls, ringtone, and alarms.

3. Barcode Scanning Button:

- There are two orange barcode scanning buttons on the left and right sides of the device.
- To activate the scanner when it's off, long press any of the scanning buttons for 3 seconds.
- Short press the scanning button to scan codes (note: ensure a dialog box is open in typing status to display the code information).


4. Touch Buttons (from left to right):

- First button: Return to the last running application.
- Second button: Return to the main interface. Long press for Google Assistant.
- Third button: Return to a higher-level interface or exit a running program.

SIM Card Removal:


Please turn off the device before installing or removing SIM cards.

- Open the SIM card cover and take out the tray.
- Insert the SIM card with the chip facing the display.
- Push the tray back into the device.

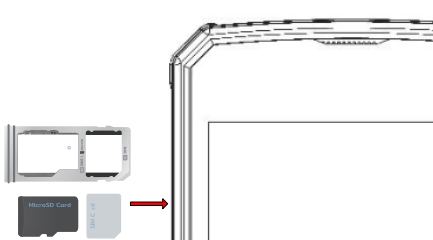





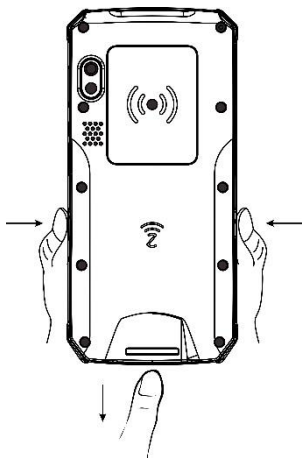













Battery: Install and Take Out Battery

- Press the right and left buttons simultaneously to remove the battery. Ensure that the "FRONT" label faces the display when installing.



Status Icons:

	E: GSM 3G: WCDMA 4G: 4G LTE		Notification
	Call forwarding		Play music
	Miss calling		Connected WLAN
	New SMS or MMS		Calling out
	Alarm Clock		Airplane mode
	Vibration mode		Silent
	Bluetooth		Battery capacity
	Connect to PC		Barcode reader on
	Connected earphone		Charging

Apps & Notifications:

- **Accessing Apps:** When on the homepage, swipe up to find all related apps. Tap the return icon at the bottom of the screen to return to the homepage.
- **App Settings:** Go to "Settings" > "Apps & Notifications" to check recently opened apps and default apps. Here, you can also set up app permissions for location, microphone, camera, etc.

Home Page Management:

1. Expand the homepage:

- The main interface can extend beyond the screen width for more space to add new shortcuts, widgets, and other items.
- Swipe horizontally to move to the left or right of the expanded homepage interface.

2. Adding Widgets and App Shortcuts:

- Choose widgets and add them to the homepage; they will automatically appear in the blank space.
- On the homepage, tap and hold any app icon to drag it to the blank space on the homepage.

3. Moving Homepage Icons:

- Tap and hold the icon until the device vibrates.
- While holding, drag the icon to the desired location on the homepage.

4. Removing Homepage Icons:

- Tap and hold the icon until the device vibrates.
- Without releasing your finger, drag the icon to the "remove" option.
- When all icons and widgets are deleted, the homepage will be removed automatically.

Wireless and Network

Wireless Connections:

- The device supports various wireless connections, including WiFi, Bluetooth, and mobile data.
- To connect to a WiFi network, go to "Settings" > "Network & Internet" > "WiFi," and select your desired network. Enter the password if required.
- Bluetooth can be enabled in the "Bluetooth" settings, allowing you to pair your device with other Bluetooth-enabled devices such as headphones, speakers, and peripherals.

Mobile Data:

- To use mobile data, ensure that your device has a SIM card with an active data plan.
- Navigate to "Settings" > "Network & Internet" > "Mobile network" to manage your mobile data settings, including data usage tracking and roaming options.

Tethering and Hotspot:

- You can use your device as a mobile hotspot to share your mobile data connection with other devices.
- Access the hotspot settings through "Settings" > "Network & Internet" > "Hotspot & tethering." You can enable Wi-Fi hotspot, USB tethering, or Bluetooth tethering.

VPN (Virtual Private Network):

- If you need to use a VPN for added security or to access restricted content, you can configure it in the "Settings" under "Network & Internet" > "VPN."

Airplane Mode:

- Use Airplane mode when flying or when you want to disable all wireless connections quickly. This setting can be found in "Settings" > "Network & Internet" > "Airplane mode."

Network Settings:

- For advanced networking settings, including configuring APNs (Access Point Names) for mobile data, managing network preferences, and resetting network settings, go to "Settings" > "Network & Internet" > "Mobile network" > "Advanced."

Display

- Adjust device display brightness, wallpaper, auto-rotate screen, sleeping mode, font size, and other display functions.

Storage

- Check SD card and relevant mobile phone storage information; you can download or format the SD card.

Battery

- View the usage of battery capacity.

Gestures

- Configure system gestures for preventing ringing.

Security & Location

- Set security status, including screen lock and lock screen preferences. Lock the screen with a pattern, PIN, or password.
- Privacy settings, including location, showing passwords, device admin apps, encryption & credentials, trust agents, and screen pinning.

Accounts

- Add accounts, configure sync settings, and set background data and automatic synchronisation.

Backup & Reset Options

- Access system backup and reset options for factory default settings, removing all data on the phone except for system software, SD card contents, music, and photos.

Date & Time

- Configure automatic date & time, automatic time zone, and use 24-hour format.

Accessibility

- Adjust miscellaneous accessibility functions.

Printing

- Connect devices for printing after installing the necessary services.

About Phone

- Check device status, legal information, model number, Android version, energy version, kernel version, and build number.

USB Connection

- The device offers default charging when connected to a computer.
- To copy files or pictures from the device to your computer, connect the device with a type-C cable and access the USB for file transfer option.

USB Connection

- The device offers default charging when connected to a computer.
- To copy files or pictures from the device to your computer, connect the device with a type-C cable and access the USB for file transfer option.

User's Manual for Battery:

- Charge the battery when it's low to maximize battery life.
- Avoid excessive charging (over a week) as it can shorten battery life.
- Ensure the battery is within the specified temperature range for charging.
- Never use the battery for unintended purposes to avoid short circuits.
- Do not use a damaged battery.
- Avoid extreme hot or cold environments to maintain battery life.

Mobile Phone Layup:

- Keep the phone and accessories away from children.
- Keep the phone dry and away from high temperatures.
- Do not attempt to open or disassemble the phone.
- Use only original accessories to maintain warranty.

Safety Information:

- Observe safety regulations when using the mobile phone, including traffic safety, flight safety, and environmental safety.
- Follow safety guidelines for system updates and avoid unauthorised updates.